

UC 601 Universal Control Automatic Gate Cleaning Feature

NOTE: The following operation applies to Main Control firmware revision 2.48 or higher.

Automatic Gates are normally fully open when the car is stopped at a floor. The Automatic Gate Cleaning Feature allows the operator to close the Automatic Gate(s) at the current floor for cleaning.

OPERATION

The Automatic Gate Cleaning feature is initiated by placing the COP Run/Stop toggle switch to the Stop position. Then every time the call button on the COP for the current floor or Hall Call button is pressed, the Automatic Gate will open or close.

To return the elevator to normal operation, simply return the COP Run/Stop toggle switch to the Run position.